



## Instructions for Installing your new *Ultra Soft* *Kisser Button* from Flex-Fletch

### Placement

Open the split and place the kisser button on the string using your best guess as to where it should be. Draw the bow, aim and note where the kisser touches your face. Let the bow down and adjust the position of the kisser. Do this until you have found a comfortable place where the kisser button rests, depending on your particular form this will usually be the corner of the mouth or general vicinity. Mark the spot above and below the kisser with masking tape or a magic marker.

### Closing the Split

This requires gluing the split closed, Flex-Fletch recommends *Zing! HD* a quick-set adhesive, or Flex-Bond, a solvent based flexible adhesive. Flex-Bond should be allowed no less than 24 hours to cure. Other acceptable glues include Goat Tuff impact glue or any superglue advertised as "Toughened" or "Rubberized"; these glues have an additive that allows the glue some degree of flexibility when cured. Place a small amount of glue in the split and close, holding the kisser button closed until it remains closed on its own. You may also hold the kisser button closed using tape.

### Anchoring the Kisser Button

The quick and easy way to accomplish this is to use **string nocks**. These are small, plastic lined, brass "C" shapes that clamp on the string and are available in three sizes. String nocks are available at your local archery shop. Archery shops use special pliers for this but you may use standard pliers if you are careful to clamp the string nock evenly.

You may also **serve the kisser button in place**. This technique is too involved to describe here so I would suggest searching [www.youtube.com](http://www.youtube.com) for how to serve a peep sight or kisser button. The technique used is the same for both