



**flex-fletch
products**

Primer pen instructions

- Remove cap, avoid touching the plunger tip with your fingers.
- Relieve pressure that may exist by plunging the tip while the pen is pointing up.
- To prime the tip hold the *ZING!* Primer Pen in a slight downward angle, not vertically, while pointing down tap lightly and quickly until the primer saturates the tip. Be cautious, the primer is thin and can run easily.

With proper use your *Zing!* Primer Pen will last a long time as the amount of waste is minimized.

By shaking the pen it is possible to estimate how much primer remains in the pen.